

your reliable partner



ROBA®-linearstop



# Expert know-how in development and design

As the technological leader, *mayr*® power transmission focuses on continuous further development. Today, highly qualified engineers and technicians work on tomorrow's innovations using the most up-to-date tools. The years of experience and countless tests at the Development and Testing Department at the Mauerstetten Headquarters form the basis of conscientious lifetime dimensioning.

The values upheld by our traditional, family-run company also include long-term stability, independence as well as a good reputation and satisfied customers.

Therefore, we place emphasis on:

- Tested product quality,
- Optimum customer service,
- Comprehensive know-how,
- Global presence,
- Successful innovations and
- Effective cost management

# Tested quality and reliability

mayr® brakes and couplings are subject to meticulous quality inspections. These include quality assurance measures during the construction process as well as a comprehensive final inspection. Only the best, tested quality leaves our factory. All products are rigorously tested on calibrated test stands, and adjusted precisely to the requested values. An electronic database in which the measurement values are archived together with the associated serial numbers guarantees 100 % traceability. On request, we confirm the product characteristics with a test protocol.

The certification of our quality management according to DIN EN ISO 9001:2015 confirms the quality-consciousness of our colleagues at every level of the company.



# Specialists for power transmission for more than a century

mayr® power transmission is one of the most traditional and yet most innovative companies in the field of power transmission. From modest beginnings in the year 1897, the family enterprise has developed into world market leader. Worldwide, the company employs more than 1200 people.

#### Unsurpassed - our standard range

*mayr*<sup>®</sup> power transmission offers an extensive variety of torque limiters, safety brakes, backlash-free shaft misalignment compensation couplings and high-quality DC drives. Numerous renowned machine manufacturers trust in solutions by *mayr*<sup>®</sup> power transmission.

#### Available worldwide

With eight subsidiaries in Germany, sales offices in the USA, France, Great Britain, Italy, Singapore and Switzerland as well as 36 additional country representatives, *mayr*<sup>®</sup> is available in all important industrial areas, guaranteeing optimum customer service around the globe.

# Never compromise on safety

We make no compromises where safety is concerned. Only top products of a perfect quality guarantee that no people are injured or machines damaged in case of malfunctions, collisions and other hazardous situations. The safety of your employees and machines is our motivation to always provide the best and most reliable clutches, couplings or brakes.

mayr® power transmission holds numerous ground-breaking patents, and is the global market or technological leader for

- application-optimised safety brakes, for example for passenger elevators, stage technology and gravity loaded axes
- torque limiters to protect against expensive overload damage and production losses and
- backlash-free servo couplings.

### Strongly positioned

mayr® sets standards in power transmission with economically viable solutions. For maximum competitiveness of your machines and systems, we always aim for the best possible cost efficiency, starting during the development of your clutch/coupling or brake right up to delivery of the finished and inspected product. For cost-efficient production, our factories in Poland and China represent the perfect supplement to the headquarters in Germany.



mayr®-headquarters in Mauerstetten



Subsidiary with production department — mayr®-China



Subsidiary with production department — mayr®-Poland





## **ROBA®-linearstop**

#### the perfect safety brake for linearly moved axes


#### Versatile use as safety brake or clamping unit

As a new brake system, the ROBA®-linearstop offers unique possibilities for increasing the safety of machinery. As a compact brake unit it can be integrated into already existing machinery and system constructions easily, quickly and without extensive adjustment work. The unit having a direct effect on the rod brakes independently from the drive system.

Die ROBA®-linearstop pneumatic can be attached to standardized cylinders acc. ISO 15552.

The ROBA®-linearstop pneumatic is not only a holding device, but can also brake dynamically on a rod. The system has been designed according to the "Principles for the inspection and certification of pneumatic braking/holding devices with safety function for linear drives" of the German Trade Association Institute for Work Safety (BIA Berufsgenossenschaftliches Institut für Arbeitsschutz) and has been tested by the **TÜV-SÜD** (German Technical Inspectorate).

The new electromagnetic ROBA®-linearstop is designed as a clamping unit.

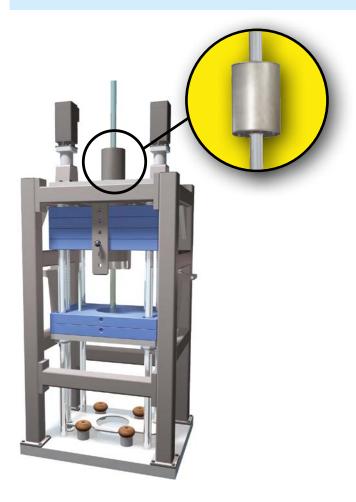



#### ROBA®-linearstop in an endurance test on a drop test stand

On the *mayr*<sup>®</sup>drop test stand specially designed for linear brakes, the braking force, dynamic braking path, switching times and position accuracy can be tested extensively.

#### Arrangement of the hydraulically actuated safety brake

ROBA®-linearstop in a universal lathe.


Piston rod secured on one side



# **ROBA®-linearstop Hydraulic – Pneumatic – Electromagnetic**

#### Highlights and Advantages

- ☐ Safety brake system according to the fail-safe principle
- ☐ Backlash-free force transmission in both directions of motion
- □ No self-reinforcement during clamping
- ☐ Clearing the clamping device is not necessary
- Maximum performance density
- ☐ Suitable for EMERGENCY STOP braking actions
- ☐ Suitable for dynamic braking actions
- ☐ Minimum reaction times
- Integrated switching condition monitoring possible
- □ Long service lifetime
- Can easily be integrated into existing constructions

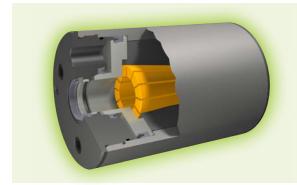

#### ROBA®-linearstop hydraulic Type 380.01 .0

Clamps a piston rod via a spring-loaded device at the exact position required and backlash-free. The brake is opened

with a hydraulic pressure of 35 – 75 bar. Suitable for EMERGENCY STOP braking actions.

Nominal holding force: 4000 - 50000 N

For data and description, please see pages 6/7.



## ROBA®-linearstop pneumatic

Type 381. 0 \_ \_ . \_ (acc. Trade Association test regulation)


Clamps a piston rod via a spring-loaded device at the exact position required and backlash-free. The brake is opened with a pneumatic pressure of 4 – 6 bar. Suitable for EMERGENCY STOP braking actions (tested by **TÜV-SÜD**, German Technical Inspectorate).

# Type 381. 1 \_ \_ . \_ for dynamic braking actions (acc. Trade Association test regulation)

Clamps and brakes a piston rod via a spring-loaded device at the exact position required and backlash-free. The brake is opened with a pneumatic pressure of 4 – 6 bar. If the Technical Data are observed, more than 20,000 dynamic braking actions are possible (tested by the **TÜV-SÜD**, German Technical Inspectorate).

Nominal holding force: 450 - 40000 N

For data and description, please see pages 8/9.

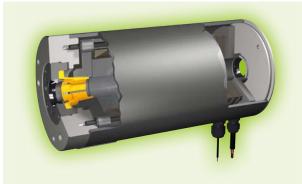

# **ROBA**<sup>®</sup>-linearstop electromagnetic Type 382.0\_\_.\_

Clamps a piston rod via a spring-loaded device at the exact position required and backlash-free. Brake is opened through electromagnetic actuation with DC current.

Suitable for EMERGENCY STOP braking actions.

Nominal holding force: 180 - 17000 N

For data and description, please see pages 12/13.

#### ROBA®-linearstop hydraulic

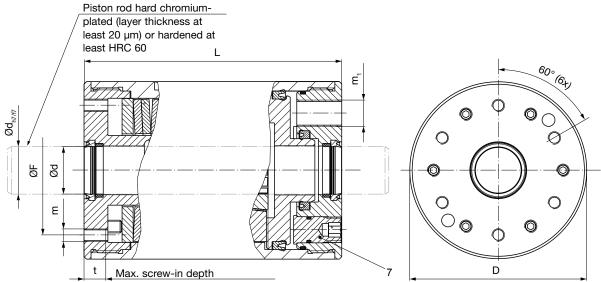


Fig. 1

#### State of Delivery

ROBA®-linearstop brakes are manufacturer-assembled ready for installation and set to the nominal holding force stipulated in the order.

If the customer does not stipulate a force adjustment in the order, the brake is set to the maximum nominal holding force acc. Table "Technical Data".

#### Important!

If installation is to be carried out without pressurization, the three emergency release screws (7) must be screwed in up to their limit (state of delivery).

Before initial operation, please read and observe the respective Installation and Operational Instructions.


#### **Function**

Due to the spring-loaded system, the fail-safe principle is guaranteed, and the ROBA®-linearstop works as a safety brake. For the required release pressure (operating pressure), please see Table "Technical Data".

The max. sliding speed is 2 m/s.

For permitted friction work in case of EMERGENCY STOP braking actions, please contact *mayr*® power transmission.

The spring-loaded, enclosed **ROBA®-linearstop**, which can be opened hydraulically, clamps a piston rod steplessly and backlash-free.

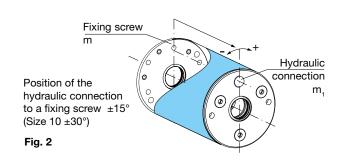

#### Maintenance/Switching Frequency


The ROBA®-linearstop is designed for a switching frequency of 1.000.000 switchings (higher switching frequencies available on request).

The ROBA®-linearstop is mainly maintenance-free.

The piston rod must be checked regularly (at least every 6 months) for contamination with friction value-reducing materials; it must be cleaned, if necessary.

In case of major accumulation of dust and dirt, or in extreme ambient conditions, special maintenance work is required.

(Please contact mayr® power transmission).

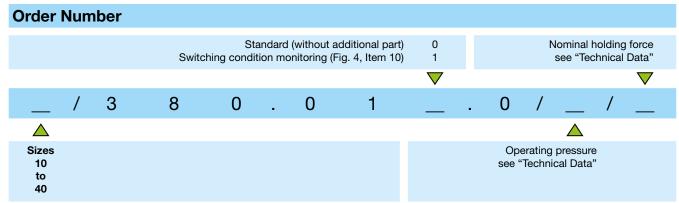

Example: Order number 10 / 380.010.0 / 40 / 6000

#### **Technical Explanations**

Tachnical Data									Si	ze								
Technical Data			10				20			30			40					
Nominal holding force <sup>1)</sup> F <sub>Nenn</sub> [kN]		4	6	8	10	8	12	16	20	20	25	30	35	35	40	45	50	
Operating	min.	[bar]	35	40	50	60	40	50	60	70	50	55	65	75	55	60	65	70
pressure 2)	max.	[bar]		15	50			15	50			16	60			10	60	
Weight		[kg]		4.9				1	1			14	.7			26	8.8	
Threads for hydraulic connection	m <sub>1</sub>			1/4" 3/8" 3/8" 3/8					8"									
Tightening torque against limit stop	Emergen- cy release screw (7)	[Nm]		10														
Pressure medium				Use hydraulic oil acc. DIN 51524-1:2006-04														
Absorption volume		[cm <sup>3]</sup>		4 7 11 16														
Ambient temperature		[°C]		-10 to +60														

Dimensions		Size		
[mm]	10	20	30	40
D	91	112	140	170
d	30	30	40	50
F	63	82	115	135
L	131	163	172	189
m	6 x M8	6 x M8	6 x M10	6 x M16
t	14	14	14	25

- 1) Minimum holding force when the brake is not pressurised and when the piston rod is dry or moistened with mineral oil.
- 2) Please contact mayr® power transmission if
  - a nominal holding force other than the one stated is required
  - the required minimum operating pressure is not available.

# Options (see also order number, page 6) Switching condition monitoring (Type 380.011.0)

Fig. 4

#### Controls (Fig. 3)

The company *mayr*® power transmission recommends hydraulic controls as shown in Fig. 3. During every operating movement of the piston rod, the 3/2-directional control valve is switched electrically and the linear brake is released.

In all other operating conditions, the piston rod is held by the linear brake.

#### Recommendation:

- Pressure fluctuations can be reduced through a non-return valve.
- In order to guarantee fastest possible switching of the brake, the largest possible line diameter should be used in the area of the return flow line. Furthermore, do not install any choke valves in this area and keep the hydraulic lines between the brake and the valve as short as possible!

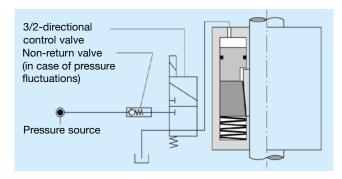


Fig. 3
Brake Rod

The *mayr*<sup>®</sup> power transmission recommends the use of piston rods.

#### Piston rod requirements

→ see page 11


At higher loads, we recommend using a higher strength material.

Yield point min. 520 N/mm² (e. g. 42CrMo4)

## **ROBA®-linearstop pneumatic**

Can be attached to standardized cylinders acc. ISO 15552 Position of the compressed air connection ± 30° to a fixing screw Max. screw-in depth Plug-in fitting 2) Ę Ød<sub>h7//77</sub> Ø ØF mayr D Piston rod hard chromium-plated (layer thickness at least 20 µm) or hardened at Acc. TA test regulation least HRC 60 TÜV tested Fig. 6 മ് ¥ D,

Fig. 7: Adaptor for standardized cylinder (can be attached to standardized cylinder acc. ISO 15552)

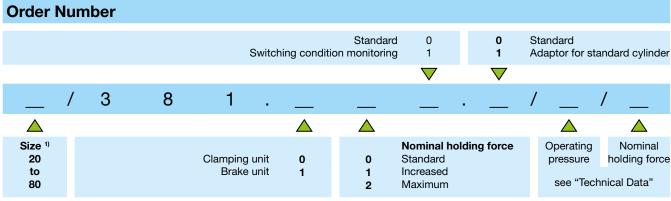

#### Example: Order number 60 / 381.121.0 / 5.0 / 10900

- 1) For other construction sizes, please contact mayr® power transmission
- 2) The plug-in fitting can be screwed onto both sides (not available on size 20 and 30)
- 3) Size 40 with adaptor for standard cyclinder can only be delivered with elbow connector (see "Options")
- 4) On size  $20 = 30^{\circ}$ , on size  $30 = 25^{\circ}$



Tooknige   Date				Size					
Technical Data			20	30	40	60	70	80	
		Type 3810	450	800	1500	4600	7500	12500	
	4.0 bar	Type 3811	625	1100	2100	6300	10000	17500	
		Type 3812	750	1400	2650	8200	13000	23000	
	4	Type 3810	525	950	1800	5300	8500	14500	
Nominal holding force 1) 2) 4)	4.5 bar	Type 3811	725	1250	2400	7300	11600	20000	
(minimum holding force)	e Se	Type 3812	875	1600	3050	9500	15200	26500	
F <sub>Nenn</sub> [N]		Type 3810	575	1050	2000	6000	9600	16500	
Neim	를 5.0 bar	Type 3811	800	1450	2700	8300	13300	23500	
(the nominal holding force is adjusted at the place of	5.0 bar	Type 3812	1000	1800	3500	10900	17500	30500	
		Type 3810	650	1200	2250	6700	10800	18500	
existing operating pressure 3)	. <u>≐</u> 5.5 bar	Type 3811	900	1550	3000	9400	15000	26000	
		Type 3812	1100	2000	3950	12300	19700	35000	
		Type 3810	700	1300	2500	7500	12000	21000	
	6.0 bar	Type 3811	975	1750	3400	10500	16700	30000	
		Type 3812	1200	2200	4400	13800	22500	40000	
Max. operating pressure	[bar]					3			
Weight	[kg]	Type 3810	0.81	1.2	2	6	10.5	19	
		Type 3811	0.9	1.4	2.3	6.6	11.5	21	
		Type 3812	1.0	1.5	2.5	7.1	12.5	23	
Air consumption per switching		Type 3810	0.025	0.045	0.083	0.244	0.389	0.635	
procedure in standard litres at	[NL]	Type 3811	0.034	0.060	0.111	0.325	0.519	0.847	
6.0 bar		Type 3812	0.042	0.075	0.139	0.406	0.648	1.058	
Plug-in fitting m <sup>1</sup>	[mm]	Tube outer diameter	6	6	8	10	10	12	
Pressure Medium				Compressed air quality acc. ISO 8573-1 Class 4					
Ambient temperature	[°C]				-10 to	o +60			

- 1) Type 381.0 Nominal holding force when the brake is not pressurized, and with the piston rod dry or moistened with mineral oil.
- 2) Type 381.1 Nominal holding force when the brake is not pressurized, and with a dry piston rod.
- 3) Please contact *mayr*<sup>®</sup> power transmission if
  - a nominal holding force other than the one stated is required
  - the required minimum operating pressure is not available.
- 4) At a switching frequency > 200.000, please reckon with a nominal holding force reduction of 20 %.

Diss	amaiama [mama]		Size									
Dim	ensions [mm]	20	30	40	60	70	80					
D		46	56	70	110	140	178					
D <sub>1</sub>		15	15	18	21	24	25					
d		16	20	20	25	32	40					
F		34	44	56	90	112	142					
h		37.3	42.3	52.8	75.9	94.4	113.9					
	Type 3810	110.5	114.5	119.5	140.5	161	187					
L	Type 3811	129.2	133.7	138.7	162.5	187	216.8					
	Type 3812	147.9	152.9	157.9	184.5	213	246.6					
m		3 x M5	3 x M6	3 x M6	3 x M8	3 x M10	3 x M12					
t		13.5	12.5	12.5	13.5	13.5	16.5					

#### Adaptor for Standard Cylinder acc. ISO 15552

Dim	ensions [mm]	Size									
Dilli	ensions [min]	20	30	40	60	70	80				
D <sub>2</sub>		54	65	72.5	109	136	175				
D <sub>3</sub>		35.5	40.5	45.5	55.5	60.5	65.5				
L,		<b>L</b> + 29	<b>L</b> + 39	<b>L</b> + 30	<b>L</b> + 39	<b>L</b> + 48	<b>L</b> + 57				
m <sub>2</sub>		4 x M6	4 x M8	4 x M8	4 x M10	4 x M12	4 x M16				
TK		38	46.5	56.5	89	110	140				
	le for standard- cylinder [piston Ø]	40	50	63	100	125	160				

#### ROBA®-linearstop pneumatic

#### **Technical Explanations**

#### **State of Delivery**

ROBA®-linearstop brakes are manufacturer-assembled ready for installation and set to the nominal holding force stipulated in the order.

Before initial operation, please read and observe the respective Installation and Operational Instructions.

#### **Function**

The spring-loaded, enclosed ROBA®-linearstop (Type 381.0\_ \_ \_), which can be opened pneumatically, clamps a piston rod steplessly and backlash-free.

The ROBA®-linearstop (Type 381.1\_ \_ \_) clamps and brakes a piston rod steplessly and backlash-free.

Due to the spring-loaded system, the fail-safe principle is guaranteed, and the **ROBA®-linearstop** works as a safety brake. For the required operating pressure, please see Table "Technical Data". The max. sliding speed is 2 m/s.

#### Maintenance/Switching Frequency

The **ROBA®-linearstop** is designed for a switching frequency of 2.000.000 switchings (higher switching frequencies available on request).

The ROBA®-linearstop is mainly maintenance-free.

The piston rod must be checked regularly (at least every 6 months) for contamination with friction value-reducing materials; it must be cleaned, if necessary.

In case of major accumulation of dust and dirt, or in extreme ambient conditions, special maintenance work is required.

(Please contact mayr® power transmission).

#### Controls (Fig. 8)

The piston space is filled with compressed air, thus suspending the spring force. The compressed air in the piston space is deduced in case of power failure. The spring force has an effect on the clamping element. The piston rod clamps/ brakes reliable and safely.

The *mayr*<sup>®</sup> power transmission recommends the following pneumatic control units.

Controls for switching time-related applications Recommendation!

For applications to optimize the switching time (reduction of the braking distance)

Controls for safety-related applications

Recommendation!

For applications to optimize the safety (in case of danger to people)

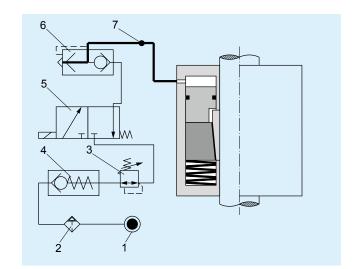


Fig. 8

Item	Name
1	Pressure source 4 – 6 bar
2	Maintenance unit
3	Pressure reducer (switching time-related application)
4	Non-return valve (in case of pressure fluctuations)
5	3/2-directional control valve
6	Quick-action ventilating valve (switching time-related application)
7	Pressure switch (safety-related applications)

Please find a detailed description in the respective Installation and Operational Instructions (go to www.mayr.com).

#### **Options** (available on request)

#### Wear monitoring (proximity switch)



Fig. 9

#### Adaptor (both sides)



**Elbow connector** (for pneumatic connection)



Fig. 11

Design with increased corrosion protection



**Connection for** 



sealing air



Installation

(on both sides)

Fig. 14

#### Positioning flange



#### **Brake Rod**

The  $\textit{mayr}^{\text{\tiny{0}}}$  power transmission recommends the use of piston rods.

#### Piston rod requirements\*

	Steel, hard chromium-plated	Steel, hardened			
Layer thickness	at least 20 µm	-			
Hardness	-	at least HRC 60			
Surface quality	Ra < 0.4 μm				
Yield point	min. 400 N/mm² (e.g. C45)				

Diameter tolerance						
Type 380, 381	h7 to f7					
Type 382	f7					


<sup>\*)</sup> Piston rods are available as piece goods. Please contact the sales employee responsible or the company mayr® directly.

For the installation of the brake, we recommend an insertion chamfer (rounded edges) on the piston rod of min. 3 x 20  $^{\circ}$  (Figure 16). Friction value reducing residues on the piston rod must be avoided. Danger of load crashes.



Fig. 16 Piston rod with insertion chamfer

## **ROBA®-linearstop electromagnetic**

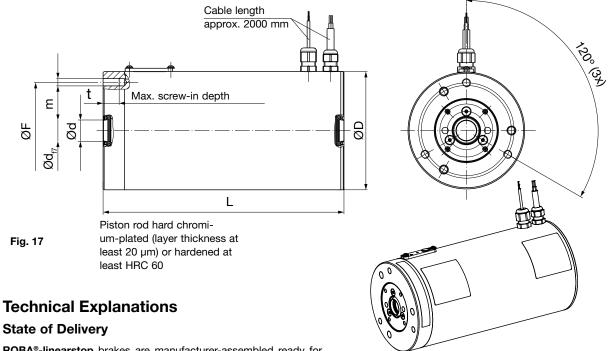

ROBA®-linearstop brakes are manufacturer-assembled ready for installation and set to the nominal holding force stipulated in the

Before initial operation, please read and observe the respective Installation and Operational Instructions.

#### **Function**

Due to the spring-loaded system, the fail-safe principle is guaranteed, and the ROBA®-linearstop works as a safety brake. The max. sliding speed is 2 m/s.

For permitted friction work in case of EMERGENCY STOP braking actions, please contact mayr® power transmission.

The spring-loaded, enclosed ROBA®-linearstop, which can be opened electromagnetically, clamps a piston rod steplessly and backlash-free.


#### Maintenance/Switching Frequency

The ROBA®-linearstop is designed for a switching frequency of 200.000 switchings (higher switching frequencies available on request).

The ROBA®-linearstop is mainly maintenance-free.

The piston rod must be checked regularly (at least every 6 months) for contamination with friction value-reducing materials; it must be cleaned, if necessary.

In case of very dusty or dirty conditions or in extreme ambient conditions, special maintenance work is necessary (please contact mayr® power transmission).

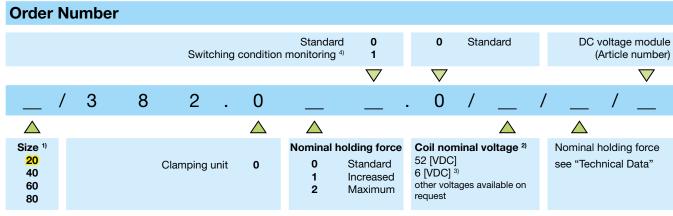

Example: Order number 60 / 382.021.0 / 52 / 6500 / 8237887

- 1) For other construction sizes, please contact mayr® power transmission
- 2) Brake operation only possible with overexcitation and reduced voltage
- 3) Only on Size 20
- 4) Not available for size 20



Technical Data	Technical Data			Size			
		Туре	20	40	60	80	
Nominal holding		382.00	180	600	1800	4500	
force 1) 2) (minimum		382.01	360	1300	4000	10500	
holding force) F <sub>Nenn</sub>		382.02	550	2100	6500	17000	
		382.00	0.9	2.4	3.4	14	
Weight	[kg]	382.01	1.3	3.2	6.8	20	
		382.02	1.7	4	10.3	26.3	
	$P_N$		8.4	12.1	19.8	42	
	P <sub>o</sub>	382.00	126	191	314	665	
	$P_{\rm H}$		2.7	4	6.6	14	
Floatsiaal Dames	$P_{N}$		16.7	24	40	84	
Electrical Power	Po	382.01	253	382	628	1329	
[44]	P <sub>H</sub>		5.4	8	13.2	28	
	$P_{N}$		25.1	36	59	126	
	Po	382.02	379	573	941	1994	
	P <sub>H</sub>		8.1	12	19.8	42	
Max. switching frequency	[1/mi	in]		3	3		
Ambient temperature	[°C]			-20 to	o +40		

Dimensions [mm]		Size					
	Туре	20	40	60	80		
D		50	75	110	160		
d		10	12	20	25		
F		42	56	90	140		
	382.00	95	107	132	155		
L	382.01	132	148	178	213		
	382.02	169	189	224	270		
m		3xM5	3xM6	3xM8	3 x M10		
t		8	10	15	14		

We reserve the right to make dimensional and constructional alterations.

- Minimum holding force when the brake is de-energised, and with the piston rod dry or moistened with mineral oil.
- 2) Please contact mayr® power transmission if
  - a nominal holding force other than the one stated is required.
  - a construction length other than the one stated is required.
- \* On further designs, deviating values are possible, please observe the values stated on the type tag.

#### **Brake Rod**

The  $\textit{mayr}^{\text{o}}$  power transmission recommends the use of piston rods. **Piston rod requirements** 

→ see page 11

#### **Electrical connection**

The following *mayr*® DC voltage module is recommended for the ROBA®-linearstop electrical Type 382.0\_ \_. **Size 20**:

Size ROBA®-linearstop	DC voltage module
20	ROBA®-brake-checker plus DC Article number 8251033

- Connection to 24 VDC
- Overexcitation voltage 24 VDC
- Holding voltage 4 VDC


In case of operation of the brake without ROBA®-brake-checker plus DC, please consult *mayr*® power transmission.

The following  $mayr^{\circ}$  DC voltage modules are recommended for the ROBA $^{\circ}$ -linearstop Type 382.0\_ \_.\_ Sizes 40/60/80:

Size ROBA®-linearstop	DC voltage module
40/60	ROBA®-multiswitch Article number 8225580
80	ROBA®-multiswitch Article number 8237887

- Connection to 230 VAC (other connection voltages available on request)
- Overexcitation voltage 207 VDC
- Holding voltage 30 VDC

In case of operation of the brake without ROBA®-multiswitch, please consult  $mayr^{\text{\tiny B}}$  power transmission.

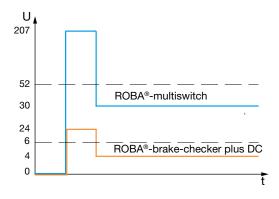

Time Diagram: Operation of the brake

For opening of the ROBA®-linearstop electrical, it is switched on with overexcitation voltage, meaning with a substantially higher-voltage than the coil nominal voltage.

When switched on, the DC voltage module briefly outputs overexcitation voltage to the magnetic coil.



#### Brake Dimensioning Type 380.01 \_.0 / Type 381.\_ \_ \_. / Type 382.0 \_ \_.0

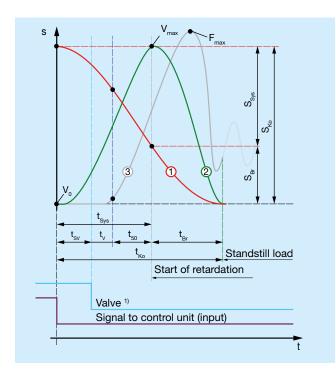


Diagram 1: Switching / Braking Times / Distances

#### Name

Name	•	
1		Distance
2		Speed
3		Axial force
β	[°]	Angular position 0° (horizontal) to 90° (vertical)
a <sub>B</sub>	[m/s <sup>2</sup> ]	Acceleration of the downward-moving load, dependent on the angular position
a <sub>v</sub>	[m/s <sup>2</sup> ]	Retardation
g	[m/s <sup>2</sup> ]	Gravitational acceleration (9.81 m/s²)
F <sub>Br</sub>	[N]	Braking force for dynamic calculation
F <sub>erf.</sub>	[N]	Required holding force
F <sub>Nenn</sub>	[N]	Nominal holding force (minimum holding force)
F <sub>NGes</sub>	[N]	Total nominal holding force (one or more brakes)
F <sub>max</sub>	[N]	Maximum holding force
m	[kg]	Load mass
S <sub>Br</sub>	[m]	<b>Braking distance:</b> Distance from the beginning of the retardation up to the standstill of the load
S <sub>Sys</sub>	[m]	<b>System distance:</b> Distance travelled by the load until the retardation begins.
S <sub>Ko</sub>	[m]	Stopping distance: Distance from the signal interruption up to standstill of the load
t <sub>50</sub>	[s]	Brake switching time
t <sub>v</sub> 1)	[s]	Valve switching time (not applicable for Type 382.0)
t <sub>sv</sub>	[s]	Switching time control unit (signal processing time)
t <sub>Sys</sub>	[s]	System switching time
t <sub>Br</sub>	[s]	Brake braking time
t <sub>Ko</sub>	[s]	Stopping time: Time from the signal interruption up to standstill of the load
Q <sub>r</sub>	[J]	Friction work per braking action

#### General

When selecting the brake, the nominal holding force must be greater or equal to the required holding force.

$$F_{Non} \geq F_{of}$$
 [N]

# Dimensioning for dynamic braking (EMERGENCY STOP)

For safety reasons, at least the weight load of the masses to be held +100 % reserve must be provided.

The larger the ratio of the nominal holding force to the required holding force, the shorter the stopping distance (for the same technical conditions)

The minimum required holding force can be calculated with the following formula:

$$\mathsf{F}_{\mathsf{erf.}} \quad = \frac{\mathsf{m} \times \mathsf{g}}{\mathsf{0.5}} \tag{N}$$

#### Dimensioning for static holding (clamping)

For safety reasons, at least the minimum weight load of the masses to be held +20 % reserve must be provided.

The minimum required holding force can be calculated with the following formula:

$$\mathsf{F}_{\mathsf{erf.}} \quad = \frac{\mathsf{m} \times \mathsf{g}}{\mathsf{O.8}}$$
 [N]

The stopping distance / stopping time of the load to be braked is strongly dependent on the following influences:

- Switching time control unit (signal processing)
- Switching time of the control valve 1)
- Switching time of the brake
- · Cross-section and length of the lines

The larger the sum of the switching times, the later the retardation of the load occurs (due to longer periods of acceleration). The stopping distance / the stopping time becomes longer (with constant holding force).

Please ensure sufficient dimensioning of the components of your system which may be placed under heavy loads during acceleration / retardation as a result of dynamic braking actions.

#### Name

Q <sub>r zul.</sub>	[J]	Permitted friction work per braking action
Q <sub>r ges.</sub>	[J]	Total friction work up to wear end (one or more brakes)
V <sub>o</sub>	[m/s]	Initial speed
V <sub>max</sub>	[m/s]	Maximum speed
Z <sub>zul.</sub>		Number of braking actions up to wear end

If you have any questions, please contact  $\textit{mayr}^{\text{e}}$  power transmission.

1) With the exception of Type 382.0\_\_.\_

#### Calculation example (dynamic braking)

Data:		
Angular position piston rod	β	= 90° (vertical axis)
Mass	m	= 800 kg
Initial speed	V <sub>o</sub>	= 0.5 m/s
Valve switching time	t <sub>v</sub>	= 0.016 s
Switching time control system	t <sub>sv</sub>	= 0.020 s
Existing operating pressure		= 5 bar

#### 1. Pre-selection of braking force

$$F_{erf.} = \frac{m \times g}{0.5}$$
 [N]
$$F_{erf.} = \frac{800 \times 9.81}{0.5} = 15696$$
 [N]

Selected: ROBA®-linearstop Size 70, Type 381.12\_.\_ Nominal holding force  $\mathbf{F}_{Nenn} = 17500 \, \mathbf{N}$  at 5 bar operating pressure (from Table "Technical Data")

#### 2. Calculation of the stopping distance /stopping time

Checking the selected brake size

#### Acceleration of the load

$$a_{B} = g x \sin(\beta) = 9.81 x \sin(90^{\circ}) = 9.81 [m/s^{2}]$$

#### System distance

#### **Braking distance**

$$S_{Br} = \frac{V_{max}^{2}}{2 \times \left(\frac{F_{NGes}}{m} - a_{B}\right)} = \frac{1.44^{2}}{2 \times 12.065} = 0.086 \text{ [m]}$$

$$V_{max} = V_{0} + a_{B} \times t_{Sys} = 0.5 + 9.81 \times 0.096 = 1.44 \text{ [m/s]}$$

## ROBA®-linearstop hydraulic

Sto	ppir	ng distanc	е				
S <sub>Ko</sub>	=	$\mathbf{S}_{Br}^{}+\mathbf{S}_{Sys}^{}$	=	0.0	86 + 0.093	= 0.179	[m]
Sto	ppiı	ng time					
$\mathbf{t}_{Ko}$	=	$\mathbf{t}_{Br}^{}+\mathbf{t}_{Sys}^{}$		=	0.119 + 0.096	= 0.215	[s]
$t_{Br}$	=	F <sub>NGes</sub> -	a <sub>R</sub>	- =	1.44	= 0.119 1	[s]

#### Retardation (for system dimensioning)

$$\mathbf{a}_{v} = \frac{\mathbf{F}_{NGes} \times 2.5}{\mathbf{m}} - \mathbf{g} = \frac{17500 \times 2.5}{800} - 9.81 = 44.87 \text{ [m/s}^2]$$

800

Load = 
$$\frac{a_v}{g} = \frac{44.87}{9.81}$$
 = 4.57 [g]

#### **3. Friction work** (Type 381.1\_ \_.\_)

#### Friction work per braking action

$$Q_r = m x a_B x S_{Br} + 0.5 x m x V_{max}^2$$
 [J]

$$Q_r = 800 \times 9.81 \times 0.086 + 0.5 \times 800 \times 1.44^2$$
 [J]

$$Q_r = 1504 (< Q_{rzul} = 12948)$$
 [J]

#### Number of braking actions up to wear end

$$Z_{zul.} = \frac{Q_{rges}}{Q_r}$$

$$Z_{zul.} = \frac{5.85 \times 106}{1504} = 3890$$
 dynamic braking actions

Switching time (Type 380.000) <sup>3)</sup>			Sizes				
			10	20	30	40	
Brake switching time	0.030	0.045	0.055	0.065			

#### ROBA®-linearstop pneumatic

Friction Work and Switching Times (Type 381.1) 1) 3)			Sizes					
			20	30	40	60	70	80
Permitted total friction work up to wear end 2)	[10 <sup>6</sup> J]	0.36	0.75	1.14	3.6	5.85	10.35	
Maximum permitted friction work per braking action 2)	[J]	579	1049	2097	7361	12948	24708	
Brake switching time	[s]	0.037	0.038	0.035	0.050	0.060	0.070	

- 1) For friction work Type 381.0\_\_.\_, please contact *mayr*® power transmission. The switching times also apply for Type 381.0\_\_.\_. 2) For higher friction work / total friction work, please contact *mayr*® power transmission.
- 3) Switching times are influenced by cable length, operating pressure and wear

#### ROBA®-linearstop electromagnetic

Switching times (Type 382.0)			Size				
			20	40	60	80	
Brake switching time	0.030	0.030	0.035	0.045			



Chr. Mayr GmbH + Co. KG Eichenstraße 1, D-87665 Mauerstetten Tel.: +49 83 41/8 04-0, Fax: +49 83 41/80 44 21 www.mayr.com, E-Mail: info@mayr.com



#### Service Germany/Austria

**Baden-Württemberg** 

Esslinger Straße 7 70771 Leinfelden-Echterdingen Tel.: 07 11/45 96 01 0

Fax: 07 11/45 96 01 10

Bavaria

Industriestraße 51 82194 Gröbenzell

Tel.: 0 81 42/50 19 80-7

Chemnitz

Bornaer Straße 205 09114 Chemnitz Tel.: 03 71/4 74 18 96

Fax: 03 71/4 74 18 95

Franken

Unterer Markt 9 91217 Hersbruck Tel.: 0 91 51/81 48 64

Fax: 0 91 51/81 62 45

Kamen

Herbert-Wehner-Straße 2 59174 Kamen

Tel.: 0 23 07/24 26 79 Fax: 0 23 07/24 26 74 North

Schiefer Brink 8 32699 Extertal Tel.: 0 57 54/9 20 77

Fax: 0 57 54/9 20 78

Mayr Transmissions Ltd.

Keighley, BD21 4LZ

Tel.: 0 15 35/66 39 00

Fax: 0 15 35/66 32 61

sales@mayr.co.uk

Valley Road, Business Park

Rhine-Main

Kreuzgrundweg 3a 36100 Petersberg

Tel.: 06 61/96 21 02 15

Austria

Pummerinplatz 1, TIZ I, A27 4490 St. Florian, Austria Tel.: 0 72 24/2 20 81-12

Fax: 0 72 24/2 20 81 89

#### **Branch office**

Mayr Zhangjiagang Power Transmission Co., Ltd. Fuxin Road No.7, Yangshe Town 215637 Zhangjiagang

Tel.: 05 12/58 91-75 67 Fax: 05 12/58 91-75 66 info@mayr-ptc.cn

Singapore

Mayr Transmission (S) PTE Ltd. No. 8 Boon Lay Way Unit 03-06, TradeHub 21 Singapore 609964

Fax: 00 65/65 60 10 00 info@mayr.com.sg

Tel.: 00 65/65 60 12 30

Switzerland Mayr Kupplungen AG

Great Britain

West Yorkshire

Tobeläckerstraße 11 8212 Neuhausen am Rheinfall Tel.: 0 52/6 74 08 70

Fax: 0 52/6 74 08 75 info@mayr.ch

**France** 

Mayr France S.A.S. Z.A.L. du Minopole Rue Nungesser et Coli 62160 Bully-Les-Mines Tel.: 03.21.72.91.91

Fax: 03.21.29.71.77 contact@mayr.fr

Mayr Corporation 10 Industrial Avenue Mahwah NJ 07430

Tel.: 2 01/4 45-72 10 Fax: 2 01/4 45-80 19 info@mayrcorp.com

Italy

Mayr Italia S.r.I. Viale Veneto, 3 35020 Saonara (PD) Tel.: 0498/79 10 20 Fax: 0498/79 10 22

info@mayr-italia.it

Representative Office Turkey Kucukbakkalkoy Mah. Brandium Residence R2 Blok D:254

34750 Atasehir - Istanbul, Turkey

Tel.: 02 16/2 32 20 44 Fax: 02 16/5 04 41 72 info@mayr.com.tr

#### Representatives

Drive Systems Pty Ltd. 12 Sommersby Court Lysterfield, Victoria 3156

Australien Tel.: 0 3/97 59 71 00

dean.hansen@drivesystems.com.au Fax: 0 20/27 13 02 29

National Engineering Company (NENCO) J-225, M.I.D.C. Bhosari Pune 411026 Tel.: 0 20/27 13 00 29

nenco@nenco.org

MATSUI Corporation

2-4-7 Azabudai Minato-ku Tokyo 106-8641 Tel.: 03/35 86-41 41

Fax: 03/32 24 24 10 k.goto@matsui-corp.co.jp Netherlands

Groneman BV Amarilstraat 11 7554 TV Hengelo OV Tel.: 074/2 55 11 40 Fax: 074/2 55 11 09

aandrijftechniek@groneman.nl

Poland

Wamex Sp. z o.o. ul. Pozaryskiego, 28 04-703 Warszawa Tel.: 0 22/6 15 90 80 Fax: 0 22/8 15 61 80

wamex@wamex.com.pl

South Korea

Mayr Korea Co. Ltd. 15, Yeondeok-ro 9beon-gil Seongsan-gu 51571 Changwon-si Gyeongsangnam-do. Korea

Tel.: 0 55/2 62-40 24 Fax: 0 55/2 62-40 25 info@mayrkorea.com

Taiwan

German Tech Auto Co., Ltd. No. 28, Fenggong Zhong Road, Shengang Dist., Taichung City 429, Taiwan R.O.C.

Tel.: 04/25 15 05 66 Fax: 04/25 15 24 13 abby@zfgta.com.tw

Czech Republic

BMC - TECH s.r.o. Hviezdoslavova 29 b 62700 Brno

Tel.: 05/45 22 60 47 Fax: 05/45 22 60 48 info@bmc-tech.cz

#### More representatives:

Belgium, Brazil, Canada, Colombia, Croatia, Denmark, Finland, Greece, Hongkong, Hungary, Indonesia, Israel, Luxembourg, Malaysia, Mexico, New Zealand, Norway, Philippines, Portugal, Romania, Russia, Slovakia, Slovenia, South Africa, Spain, Sweden, Thailand

You can find the complete address for the representative responsible for your area under www.mayr.com in the internet.  $\stackrel{\circ}{ ext{C}}$